



NJ501-4500

Sysmac NJ5 CPU with Robot kinematics, (max 8 robots), 20MB memory, built-in EtherCAT (64 servo axes, in total 192 EtherCAT nodes) and EtherNet/IP

Specifications

Controller functionality	Motion control, Robotics, Sequence control
Max. number of synchronous axes	64
Max. number of axes (incl. virtual)	64
Max. number of robots	8
Primary task cycle time	0.5 ms
Program memory	20 MB
Variables memory	6 MB
Communication port(s)	EtherCAT Master, EtherNet/IP, USB
Communication option(s)	CAN, CompoNet Master, DeviceNet Master, DeviceNet Slave, EtherCAT Slave, MODBUS Master, MODBUS Slave, PROFIBUS DP Master, PROFIBUS DP Slave, PROFINET Master, Serial RS-232C, Serial RS-422, Serial RS-485
Max. number of remote I/O nodes	192
I/O system	CJ I/O Bus
Max. number of expansion units	40
Height	90 mm
Width	90 mm
Depth	90 mm
Weight	530 g

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. Click here for [terms of use](#).

Accessories



GX-JC03

3-port EtherCAT Junction module, 24 VDC power supply



GX-JC06

6-port EtherCAT Junction module, 24 VDC power supply

GX-JC06-H

6-port EtherCAT Junction module, 24 VDC power supply, with node switches

HMC-SD492

4 GB SD memory card



NJ-PA3001

Sysmac NJ power supply unit, 100-240 VAC, 30 W, "RUN" output relay



NJ-PD3001

Sysmac NJ power supply unit, 24 VDC, 30 W, "RUN" output relay



W4S1-05D

5-port enhanced Ethernet switch

Spare parts



CJ1W-BAT01

Battery for CJ1M PLCs



CJ1W-TER01

End plate for CJ1 CPU rack or expansion rack. Only required as spare part.

Downloads

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. Click here for [terms of use](#).

**FDK CR14250SE**
Battery Safety Datasheet

EN PDF 147 KB

**NJ-Series**
Datasheet

EN PDF 5.73 MB

**NJ-Series CPU Unit**
Hardware
Users Manual

EN PDF 6.95 MB

**NJ-Series Robotics CPU**
Units
Users Manual

EN PDF 5.76 MB

**NJ-series -[DeviceNet]-**
3G3MX2-series Inverter
Connection Guide

EN ZIP 2.98 MB

**NJ-series -[DeviceNet]-**
3G3RX-V1-series
Inverter
Connection Guide

EN ZIP 3.75 MB

**NJ-series -[DeviceNet]-**
ABB IRC5 Robot
Controller
Connection Guide

EN ZIP 5.81 MB

**NJ-series -[DeviceNet]-**
NE1A-series Safety
Network Controller
Connection Guide

EN PDF 3.47 MB

**NJ-series -[EtherCAT]-**
3G3MX2-series Inverter
Connection Guide

EN PDF 1.72 MB

**NJ-series -[EtherCAT]-**
3G3MX2-series Type V1
Connection Guide

EN PDF 2.18 MB

**NJ-series -[EtherCAT]-**
3G3RX-V1-series
Inverter
Connection Guide

EN PDF 2.28 MB

**NJ-series -[EtherCAT]-**
Balluff BNI ECT-508
Connection Guide

EN PDF 1.85 MB

**NJ-series -[EtherCAT]-**
Balluff RFID (BIS V
Series)
Connection Guide

EN PDF 1.76 MB

**NJ-series -[EtherCAT]-**
CKD MW4G-series
NW4Gx-T7ECxxx (W4G-
OPP8-xEC-xx)
Connection Guide

EN PDF 1.2 MB

**NJ-series -[EtherCAT]-**
Copley Accelnet
Connection Guide

EN ZIP 5.75 MB

**NJ-series -[EtherCAT]-**
Copley Xenus Plus XEL
Connection Guide

EN ZIP 3.81 MB

**NJ-series -[EtherCAT]-**
DELTA ELECTRONICS
ASDA-A2-series
Connection Guide

EN ZIP 3.72 MB

**NJ-series -[EtherCAT]-**
DELTA R1-EC-series
Slave Remote Module
Connection Guide

EN PDF 2.22 MB

**NJ-series -[EtherCAT]-**
DENSO WAVE RC8
Robot Controller
Connection Guide

EN PDF 3.54 MB

**NJ-series -[EtherCAT]-**
E3NW-ECT Digital
Sensor Communication
Unit
Connection Guide

EN PDF 2.01 MB

**NJ-series -[EtherCAT]-**
E3X-ECT
Connection Guide

EN PDF 2.41 MB

TERMS OF WEBSITE USEThis PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. [Click here for terms of use.](#)



NJ-series -[EtherCAT]- Elmo Gold Solo Whistle Digital Servo Drive

Connection Guide

EN ZIP 3.49 MB



NJ-series -[EtherCAT]- FANUC R-30iB Robot Controller

Connection Guide

EN PDF 3.82 MB



NJ-series -[EtherCAT]- FESTO CPX-FB38 Valve Terminals MPA

Connection Guide

EN PDF 2.47 MB



NJ-series -[EtherCAT]- FESTO CTEU-EC Valve Terminals VTUB-12

Connection Guide

EN PDF 2.52 MB



NJ-series -[EtherCAT]- FESTO Valve Terminals MPA CPX-FB37

Connection Guide

EN PDF 2.01 MB



NJ-series -[EtherCAT]- FH-series Vision System

Connection Guide

EN PDF 2.38 MB



NJ-series -[EtherCAT]- FQ-MS12x(-M)-ECT Vision Sensor

Connection Guide

EN PDF 2.63 MB



NJ-series -[EtherCAT]- GRT1-ECT SmartSlice

Connection Guide

EN PDF 2.9 MB



NJ-series -[EtherCAT]- GX-ILM08C -[IO-Link]- Balluff Cylinder Sensor (BMF 203K)

Connection Guide

EN PDF 2.24 MB



NJ-series -[EtherCAT]- GX-ILMxxx -[IO-Link]- E2E-series Proximity Sensor

Connection Guide

EN PDF 2.31 MB



NJ-series -[EtherCAT]- GX-ILMxxx -[IO-Link]- E3Z-series Photoelectric Sensor

Connection Guide

EN PDF 2.24 MB



NJ-series -[EtherCAT]- GX-series Analog I/O Terminal

Connection Guide

EN PDF 1.74 MB



NJ-series -[EtherCAT]- GX-series Digital I/O Terminal

Connection Guide

EN PDF 1.74 MB



NJ-series -[EtherCAT]- GX-series Encoder Input Terminal

Connection Guide

 
EN PDF 1.75 MB



NJ-series -[EtherCAT]- HENGSTLER ACURO(R) AC58-series Absolute Encoder

Connection Guide

EN PDF 1.47 MB



NJ-series -[EtherCAT]- HIWIN D1-N-series

Connection Guide

EN ZIP 3.85 MB



NJ-series -[EtherCAT]- HMS Anybus Communicator

Connection Guide

EN PDF 1.93 MB



NJ-series -[EtherCAT]- HMS Anybus X-gateway

Connection Guide

EN PDF 3.16 MB



NJ-series -[EtherCAT]- HORIBA STEC SEC- Z500X-series Mass Flow Controller

Connection Guide

EN PDF 1.5 MB



NJ-series -[EtherCAT]- Hivertec HES-C400/NJ

Connection Guide

EN PDF 2.14 MB



NJ-series -[EtherCAT]- Hivertec HES-M4xx/NJ

Connection Guide

EN PDF 1.89 MB



NJ-series -[EtherCAT]- IAI ACON/ACON- CA/PCON/PCON- CA/DCON-CA Controller

Connection Guide

EN PDF 1.38 MB



NJ-series -[EtherCAT]- IAI Corporation MCON Controller

Connection Guide

EN PDF 2.88 MB



NJ-series -[EtherCAT]- IAI Corporation MSEP Controller

Connection Guide

EN PDF 1.48 MB

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. [Click here for terms of use.](#)



NJ-series -[EtherCAT]- IAI SCION-CA/SCON-CAL Controller

Connection Guide

EN PDF 2.12 MB



NJ-series -[EtherCAT]- IAI X-SEL Controller XSEL-R/S/RX/SX/RXD/SXD

Connection Guide

EN PDF 2.67 MB



NJ-series -[EtherCAT]- KYOWA SENERGY Controller (MotionLinX Series)

Connection Guide

EN PDF 1.72 MB



NJ-series -[EtherCAT]- M-System R30-series Remote I/O

Connection Guide

EN PDF 1.74 MB



NJ-series -[EtherCAT]- M-System R8-series Remote I/O

Connection Guide

EN PDF 2.19 MB



NJ-series -[EtherCAT]- MTS KG R-series Linear Position Sensors

Connection Guide

EN PDF 2.46 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- E2E-series Proximity Sensor

Connection Guide

EN PDF 2.44 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- E3Z-series Photoelectric Sensor

Connection Guide

EN PDF 2.5 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO SFAW-series W Flow Sensor

Connection Guide

EN PDF 2.62 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO SPAE-Pressure Sensor

Connection Guide

EN PDF 2.42 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- FESTO VPPM-series

Connection Guide

EN PDF 2.35 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- Piab AB Vac.Ejector piCOMPACT23

Connection Guide

EN PDF 2.68 MB



NJ-series -[EtherCAT]- NX-ECC + NX-ILM400 - [IO-Link]- Turck I/O Hub (TBIL)

Connection Guide

EN PDF 2.76 MB



NJ-series -[EtherCAT]- NX-PG0122 -[Pulse]- ORIENTAL MOTOR RK II Stepping Motor

Connection Guide

EN ZIP 6.11 MB



NJ-series -[EtherCAT]- NX-PG0122 -[Pulse]- ORIENTAL MOTOR Stepping Motor αSTEP

Connection Guide

EN ZIP 8.5 MB



NJ-series -[EtherCAT]- ORIENTAL MOTOR NETC01-ECT Network Converter

Connection Guide

EN PDF 2.96 MB



NJ-series -[EtherCAT]- ORIENTAL MOTOR aSTEP DC Multi-Axis Drive (AZDxA-KED)

Connection Guide

EN PDF 3.99 MB



NJ-series -[EtherCAT]- PHOENIX CONTACT AXL E EcX Axioline E

Connection Guide

EN PDF 2.71 MB



NJ-series -[EtherCAT]- PHOENIX CONTACT Axioline F-series I/O system

Connection Guide

EN PDF 2.07 MB



NJ-series -[EtherCAT]- SANYO DENKI SANMOTION R TYPE S

Connection Guide

EN ZIP 4.28 MB



NJ-series -[EtherCAT]- SMC EX180-SEC5-X23x SI Unit

Connection Guide

EN PDF 2.04 MB



NJ-series -[EtherCAT]- SMC EX260-SECx SI Unit

Connection Guide

EN PDF 2.14 MB



NJ-series -[EtherCAT]- SMC EX600-SECx SI Unit

Connection Guide

EN PDF 2.62 MB



NJ-series -[EtherCAT]- SMC IN587 SI unit

Connection Guide

EN PDF 2.27 MB

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. [Click here for terms of use.](#)



NJ-series -[EtherCAT]- SMC JXCE1 Direct input type Step Motor Controller

Connection Guide

EN PDF 1.48 MB



NJ-series -[EtherCAT]- THK Network Unit TNU- EC Electrical Actuator Controller

Connection Guide

EN PDF 2.28 MB



NJ-series -[EtherCAT]- Turck BL20-E-GW-EC Gateway

Connection Guide

EN PDF 2.13 MB



NJ-series -[EtherCAT]- VAT 612/615/642/650/652/951/952/ Control Valve

Connection Guide

EN PDF 2.91 MB



NJ-series -[EtherCAT]- WAGO I/O-SYSTEM 750- series Fieldbus Coupler

Connection Guide

EN PDF 2.55 MB



NJ-series -[EtherCAT]- YASKAWA Σ-V-series SGDV-xxxxE1

Connection Guide

EN ZIP 6.95 MB



NJ-series -[EtherCAT]- ZW-7000-series Displacement Sensor

Connection Guide

EN PDF 2.11 MB



NJ-series -[EtherCAT]- ZW-CE1 Displacement Sensor

Connection Guide

EN PDF 1.98 MB



NJ-series -[EtherNet/IP]- ABB IRC5 Robot Controller

Connection Guide

EN ZIP 6.44 MB



NJ-series -[EtherNet/IP]- CJ2-series Controller

Connection Guide

EN ZIP 6.41 MB



NJ-series -[EtherNet/IP]- CK3M-CPU1x1

Connection Guide

EN PDF 3.93 MB



NJ-series -[EtherNet/IP]- DENSO WAVE RC7M Robot Controller

Connection Guide

EN ZIP 3.83 MB



NJ-series -[EtherNet/IP]- DENSO WAVE RC8 Robot Controller

Connection Guide

EN ZIP 5.39 MB



NJ-series -[EtherNet/IP]- FH-series Vision System

Connection Guide

EN ZIP 1.96 MB



NJ-series -[EtherNet/IP]- FQ2-series Smart Camera

Connection Guide

EN ZIP 3.55 MB



NJ-series -[EtherNet/IP]- FZ4-series Vision Sensor

Connection Guide

EN ZIP 1.74 MB



NJ-series -[EtherNet/IP]- FZ5-series Vision System

Connection Guide

EN ZIP 1.93 MB



NJ-series -[EtherNet/IP]- IAI Corporation ACON/PCON/DCON/SCON Controller

Connection Guide

EN ZIP 2.73 MB



NJ-series -[EtherNet/IP]- IAI Corporation XSEL- Rx/Sx Controller

Connection Guide

EN ZIP 4.93 MB



NJ-series -[EtherNet/IP]- Nidec Sankyo SC5000- series

Connection Guide

 
EN ZIP 7.36 MB



NJ-series -[EtherNet/IP]- Omron Adept Robot ePLC

Connection Guide

EN ZIP 2.47 MB



NJ-series -[EtherNet/IP]- Omron Adept Robot ePLCIO

Connection Guide

EN ZIP 2.6 MB



NJ-series -[EtherNet/IP]- PHOENIX CONTACT AXL E-series I/O Device

Connection Guide

EN ZIP 2.22 MB




NJ-series -[EtherNet/IP]- SMC EX600-SENx SI Unit

Connection Guide


EN ZIP 2.59 MB

TERMS OF WEBSITE USE


This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. Click here for [terms of use](#).



**NJ-series -[EtherNet/IP]-
SMC JXC91 Step Motor
Controller**
Connection Guide
EN ZIP 2.32 MB



**NJ-series -[EtherNet/IP]-
Seiko Epson RC180
Robot Controller**
Connection Guide
EN ZIP 2.6 MB




**NJ-series -[EtherNet/IP]-
Turck BL20-E-GW-EN
Multiprotocol Gateway**
Connection Guide
EN ZIP 2.21 MB




**NJ-series -[EtherNet/IP]-
Turck TBEN-series
Compact Block I/O-
module**
Connection Guide
EN ZIP 1.57 MB




**NJ-series -[EtherNet/IP]-
V680S-series RFID**
Connection Guide
EN ZIP 2.28 MB




**NJ-series -[EtherNet/IP]-
WAGO I/O-SYSTEM 750-
series Ethernet Fieldbus
Coupler**
Connection Guide
EN ZIP 2.44 MB




**NJ-series -[EtherNet/IP]-
Yamaha Motor RCX-
series Robot Controller**
Connection Guide
EN ZIP 3.98 MB




**NJ-series -[EtherNet/IP]-
Yamaha Motor TS-series
Single-axis Robot
Controller**
Connection Guide
EN ZIP 5.84 MB



**NJ-series -[EtherNet/IP]-
Yamaha RCX340 Robot
Controller**
Connection Guide
EN ZIP 4.75 MB




**NJ-series -[EtherNet/IP]-
ZW-7000-series
Displacement Sensor**
Connection Guide
EN ZIP 2.52 MB




**NJ-series -[EtherNet/IP]-
ZW-CE1 Displacement
Sensor**
Connection Guide
EN ZIP 4.26 MB




**NJ-series -[Ethernet
TCP/IP]- FQ-CR-series**
Connection Guide
EN ZIP 3.11 MB




**NJ-series -[Ethernet
TCP/IP]- Janome Sewing
Machine JR3000-series
Robot**
Connection Guide
EN ZIP 1.85 MB



**NJ-series -[Ethernet
TCP/IP]- MARS TOHKEN
2D Image Reader (MV-
300/500 Series)**
Connection Guide
EN PDF 2.05 MB




**NJ-series -[Ethernet
TCP/IP]- SCHOTT
MORITEX MLEF-series
Digital Controller**
Connection Guide
EN ZIP 2.75 MB




**NJ-series -[Ethernet
TCP/IP]- V750-series
RFID System**
Connection Guide
EN ZIP 4.7 MB




**NJ-series -[Ethernet
TCP/IP]- ZW-series
Displacement Sensor**
Connection Guide
EN ZIP 4.35 MB



**NJ-series -[RS-232C]-
G9SP Safety Controller**
Connection Guide
EN ZIP 4.5 MB



**NJ-series -[RS-232C]-
V400-R2-series Ultra
Small Multi-code Reader**
Connection Guide
EN ZIP 4.64 MB



**NJ-series -[RS-232C]-
V500-R2-series Fixed
Laser-Type Barcode
Reader**
Connection Guide
EN ZIP 4.71 MB




**NJ-series -[RS-232C]-
V750-series RFID
System**
Connection Guide
EN ZIP 5.11 MB



**NJ-series -[RS-232C]-
ZW-series Displacement
Sensor**
Connection Guide
EN ZIP 4.68 MB



**NJ-series -[RS-485
CompoWay/F]-
E5CC/E5EC/E5AC
Digital Controller**
Connection Guide
EN ZIP 4.71 MB



**NJ-series -[RS-485
CompoWay/F]-
KM1/KE1-series**
Connection Guide
EN ZIP 5.4 MB

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. Click here for [terms of use](#).



NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR BLE-series Brushless Motor

Connection Guide

EN ZIP 2.67 MB



NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR RK II-series Stepping Motor

Connection Guide

 
EN ZIP 5.5 MB



NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR αSTEP AR-series

Connection Guide

EN ZIP 2.83 MB



NJ-series -[RS-485 Modbus]- ORIENTAL MOTOR αSTEP AZ-series

Connection Guide

EN ZIP 3.01 MB



NJ/NX Series Brochure

EN PDF 6.96 MB



NJ/NX-Series CPU Unit Built-in EtherCAT Port

Users Manual

EN PDF 16.3 MB



NJ/NX-Series CPU Unit Built-in EtherNet/IP Port

Users Manual

EN PDF 13.4 MB



NJ/NX-Series CPU Unit Motion Control

Users Manual

EN PDF 20 MB



NJ/NX-Series CPU Unit Software

Users Manual

EN PDF 22.2 MB



NJ/NX-Series Instructions

Reference Manual

EN PDF 11.7 MB



NJ/NX-Series Motion Control Instructions

Reference Manual

EN PDF 4.93 MB



NJ/NX-Series Troubleshooting Manual

Users Manual

EN PDF 9.14 MB



NJ/NX-Series for Motion Control

Getting Started Guide

EN PDF 18.1 MB



NJ/NX-series - [EtherCAT]- CKD ABSODEX driver (AX9000TS/TH-U5)

Connection Guide

EN PDF 1.73 MB



NJ/NX-series - [EtherCAT]- Hitachi ADV-Series AC Servo Drives

Connection Guide

EN ZIP 4.29 MB



NJ/NX-series - [EtherCAT]- Inficon gauge (BPG402-SE)

Connection Guide

EN PDF 1.22 MB



NJ/NX-series - [EtherCAT]- Kashiya Dry Vacuum Pump (E-CAT01 1ch)

Connection Guide

EN PDF 1.59 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD Sensor (PPX series)

Connection Guide

EN PDF 2.43 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD Sensor (WFC series)

Connection Guide

EN PDF 2.75 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- CKD WFK2 Flow sensor

Connection Guide

EN PDF 2.09 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- MTS Sensors (E-Series)

Connection Guide

EN PDF 2.4 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- PATLITE Beacon (NE-IL)

Connection Guide

EN PDF 2.02 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- PATLITE Tower (LR6-IL)

Connection Guide

EN PDF 2.08 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC (ISA3-xxx)

Connection Guide

EN PDF 2.61 MB

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. [Click here for terms of use.](#)



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC (xSE20Bx-L(-M/-P)- x)

Connection Guide

EN PDF 2.13 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC ITVx000/-IO*

Connection Guide

EN PDF 1.89 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- SMC Servo 24VDC (JXCL1)

Connection Guide

EN PDF 2.23 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- Schmalz Ejector (SCPSi)

Connection Guide

EN PDF 2.4 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (O5D10x/O5D15x)

Connection Guide

EN PDF 2.42 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (PN7x94)

Connection Guide

EN PDF 2.72 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm (TN24xx)

Connection Guide

EN PDF 2.74 MB



NJ/NX-series - [EtherCAT]- NX-ECC + NX-ILM400 -[IO-Link]- ifm TR7439 Pt100/1000

Connection Guide

EN PDF 2.43 MB



NJ/NX-series - [EtherCAT]- Nidec Sankyo S-FLAG II Series AC Servo (DB6xx41)

Connection Guide

EN PDF 2.65 MB



NJ/NX-series - [EtherCAT]- ORIENTAL MOTOR Stepper Motor (AZ-series)

Connection Guide

EN PDF 2.89 MB



NJ/NX-series - [EtherCAT]- SANYO DENKI AC Servo SANMOTION R 3E MODEL TYPE S

Connection Guide

EN PDF 3.08 MB



NJ/NX-series - [EtherCAT]- SANYO DENKI AC Servo SANMOTION R ADVANCED MODEL TYPE F

Connection Guide

EN PDF 3.61 MB



NJ/NX-series - [EtherCAT]- SHIMADZU Power Unit for Turbo Molecular Pump (TMP)

Connection Guide

EN PDF 1.29 MB



NJ/NX-series - [EtherCAT]- SICK Absolute Encoder (AFS60/AFM60)

Connection Guide

EN PDF 1.52 MB



NJ/NX-series - [EtherCAT]- Schmalz Compact Terminal (SCTSi-ECT)

Connection Guide

EN PDF 1.33 MB



NJ/NX-series - [EtherCAT]- Weidmüller Remote I/O System (u- remote IP20)

Connection Guide

EN PDF 1.8 MB



NJ/NX-series - [EtherCAT]- YASKAWA Σ-7-series

Connection Guide

EN ZIP 3.77 MB



NJ/NX-series - [EtherNet/IP]- Balluff BNI EIP-50x-105-Z015

Connection Guide

EN PDF 3.35 MB



NJ/NX-series - [EtherNet/IP]- CKD ABSODEX Driver (AX9000TS/TH-U6)

Connection Guide

EN PDF 1.71 MB



NJ/NX-series - [EtherNet/IP]- HMS Anybus Communicator

Connection Guide

EN PDF 1.51 MB



NJ/NX-series - [EtherNet/IP]- Hilscher netTAP NT100 Gateway (NT 100-RE-DN)

Connection Guide

EN PDF 3.5 MB



NJ/NX-series - [EtherNet/IP]- IAI RCON system & MCON / MSCON / MSEP Controller

Connection Guide

EN PDF 1.9 MB



NJ/NX-series - [EtherNet/IP]- KOGANEI Manifold Solenoid Valve (F Series)

Connection Guide

EN PDF 2.43 MB



NJ/NX-series - [EtherNet/IP]- Nordson ProBlue Adhesive Melters

Connection Guide

EN PDF 2.61 MB



NJ/NX-series - [EtherNet/IP]- ORIENTAL MOTOR αSTEP Compatible Driver (AZD-xEP)

Connection Guide

EN PDF 1.82 MB



NJ/NX-series - [EtherNet/IP]- SMC Solenoid Valve (SI Unit EX260-SEN#)

Connection Guide

EN PDF 1.65 MB



NJ/NX-series - [EtherNet/IP]- Schmalz K.K. Compact Terminal (SCTSi-EIP)

Connection Guide

EN PDF 1.69 MB



NJ/NX-series - [EtherNet/IP]- ifm IO-Link master (AL1322)

Connection Guide

EN PDF 3.18 MB



NJ/NX-series - [EtherNet/IP]- ifm IO-Link master (AL1920)

Connection Guide

EN PDF 3.07 MB



NJ/NX-series Instructions Reference Reference Manual

EN PDF 67.9 MB



NJ/NX-series Machine Automation Controller Brochure

EN PDF 1.95 MB



NJ/NX-series Machine Automation Controller Database Connection CPU Unit Brochure

EN PDF 1.24 MB



NJ/NX/NY-series Sysmac Library User's Manual for Safety System Monitor Library Users Manual

EN PDF 922 KB



Omron GX-JC0x-x EtherCAT Junction Box EtherCAT ESI file

EN ZIP 3.36 KB



Redundancy and Motion Safety Flyer

EN PDF 960 KB



Sysmac Catalogue

EN PDF 43.5 MB



Sysmac CNC Brochure

EN PDF 1.07 MB



Sysmac Studio Operation Manual

EN PDF 62.4 MB



Sysmac: A Fully Integrated Platform Brochure

EN PDF 10.4 MB

TERMS OF WEBSITE USE

This PDF document was created from the European OMRON Industrial Automation website on 10 August, 2022. [Click here for terms of use.](#)